



## How to access Group 5 CP via RS485?

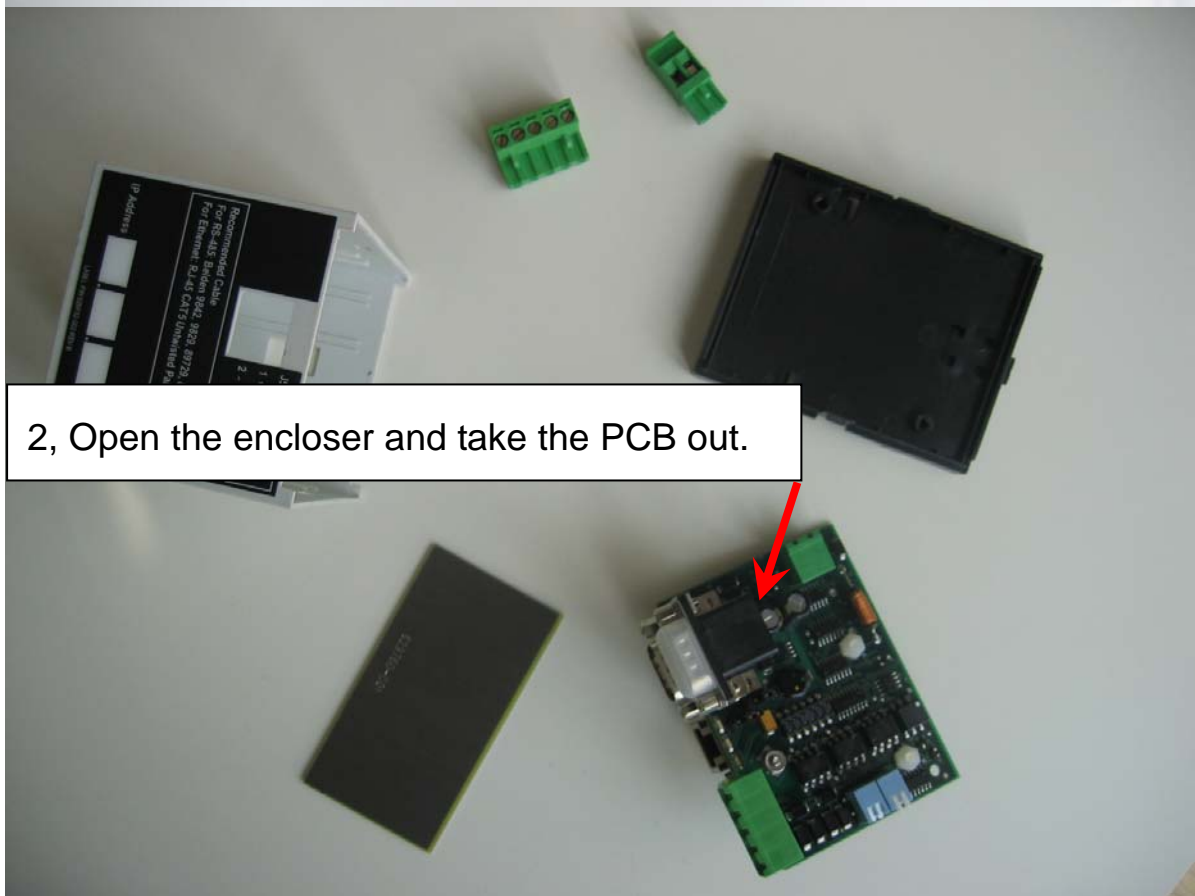

3, Move the lower jumper to left side and keep the upper jumper to right side.

Jumper

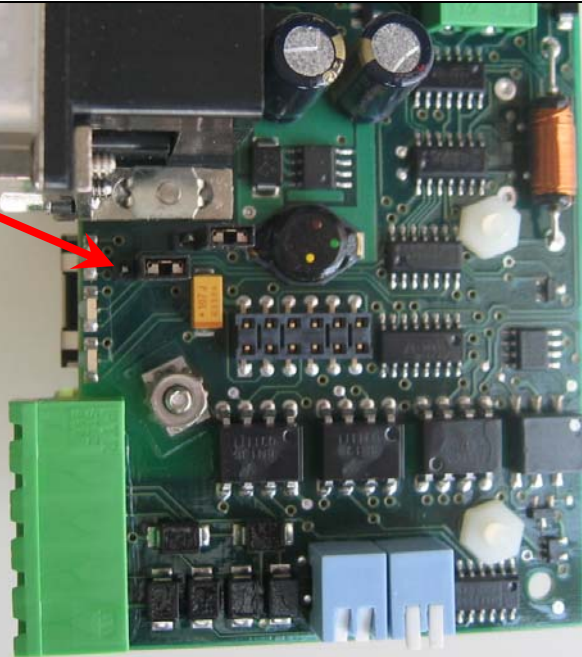

4, In case of connecting to Control Panel from J1, the LED of "POWER" will show yellow color.



Tips: This module can work with either Ethernet function or Modbus function depending on the location of the lower jumper.